

IMPORTANT: PLEASE READ

PLEASE READ CAREFULLY!!!

DO NOT USE THE ENCLOSED CD UNLESS YOU ARE USING WINDOWS 98. If you are using a different version of MS Windows, please take 10 MINUTES to read the enclosed instructions for installation and usage.

CHARGE THE HEADTRIP FOR 3 HOURS. Prior to first usage, be sure to charge the Headtrip for 3 hours. Failure to do so will cause problems later.

SHUT DOWN THE HEADTRIP BEFORE REMOVING FROM THE PC. The Headtrip is not a conventional MP3 plug and play device. You must be sure to shut down the Headtrip software. Be sure the icon in the Windows Task Manager Toolbar (usually in the bottom right of your Windows screen) indicates it is safe for removal before disconnecting the Headtrip.

TO CONSERVE POWER – STOP THE DEVICE, DO NOT PAUSE THE DEVICE. If you select PAUSE, please note that the Headtrip will continue to deplete the battery. If you select STOP and later select PLAY again, the Headtrip will start playing at the beginning of the last song played.