



User's Manual

Think Headtrip™ Wireless MP3 Player

Caution! – Please Read This First

- Do not disconnect the Headtrip from the PC during file transfers or data formatting of the player.
- The Headtrip is already preformatted, but if you choose to reformat the player, use FAT. **Do not use FAT32!**
- It is not recommended that you use the Headtrip in extremely hot, cold, dusty or humid environments which may damage the internal electronics.
- Do not drop the player, as the warranty does not cover repairs due to accidents or user neglect. The warranty only covers defects or flaws in manufacturing.
- Note: Once the player has finished playing all songs it will automatically power off.
- The Headtrip will not play music while it is connecting to the PC.
- The Headtrip can also work with external speakers via the external USB connection port.
- To release the Headtrip from the "Repeat One" mode, remember to hold the "EQ/CYC" button for a full 3 seconds to revert to normal playing mode.

Standard Operating Instructions (Buttons + Controls)

A. On/Off Button (Controls "On," "Off" & "Pause" Modes):

1. **Power On ("Play Mode"):** Press the "On/Off" button for about 2 seconds while the Headtrip is in idle mode. Two indicators will blink and the speakers will "beep" when the Headtrip is powered up. The Headtrip is now in the "Play mode".

2. **"Pause" & "Off" Modes:** While the Headtrip is in the "Play" mode, you can pause it by pressing & holding the "On/Off" button until it beeps.

B. EQ Button (Controls "Equalizer" & "Repeat" Modes):

To select from 5 Equalizer effects, press & quickly release the EQ button while the Headtrip is playing. To repeat a track, hold the EQ button down without releasing it for about 3 seconds.

C. Volume+, Volume- (Controls "Volume" & "Song" Selections):

Press & hold these controls to adjust the volume. You can easily skip songs, or "rewind" to previous tracks by pressing and releasing the Volume +/- controls.

D. Low Power Status:

If you're running low on Headtrip battery power, the blinking red indicator light will start blinking. The

Headtrip will automatically power-off after about 5 to 10 minutes once it starts blinking red.

E. Uploading & Erasing MP3/WMA Files:

To upload MP3 files into the Headtrip unit, connect the USB cord from the Headtrip to your PC. You'll see an icon appear on your PC. Simply drag MP3 files into the icon folder. When finished, disconnect the USB cable and enjoy the music. To erase MP3 files, reconnect Headtrip to your PC via the USB port and use the software to delete unwanted MP3 files in your Headtrip unit.

(Connecting the Headtrip to Your PC)

• Plug the Data Transfer/Battery Charging USB Cable included with your Headtrip into any available USB port on your PC. (It's okay to connect to your system, whether the PC is on or off). You should see an icon appear in your Windows Task Manager icon tray once the Headtrip has been detected.

• Under "My Computer" you should now see a "Portable Device". This software will allow you to drag or copy the files that you want to download or upload.

• Note: You can use the MP3 player for standard MP3/WMA listening and as a standard USB file transfer device for other files and images. When in play mode, the Headtrip will ignore other files and only play the MP3 & WMA files.

• Windows 98 Users Driver Installation; Insert the included CD in your PC's CD Drive and double click to open the CD ROM files. Find the file named MSIEN.MSI and double click the file to begin installation, then follow the on-screen instructions. (Windows 98 Users, please see additional instructions listed under Windows 98 Users Driver Installation)

(How to Charge The Headtrip Battery)

• Use the USB/Power charging cable included with the unit, plugging it into an available USB port on your system. (Note; The power cable doubles as a data transfer cable, so even during file transfers, the unit will continue charging.)

• While the unit is charging, the red LED light will remain on. When the unit has completed charging, the green LED light will come on.

• The Headtrip should be fully charged each time, in order to extend the battery life and optimize the MP3/WMA playing time.

• Battery life may vary depending on the operating environment and other conditions.

• Please be sure to remove the power cable after the battery is fully charged in order to help extend the battery life.


Specifications

Music Formats:	MP3 & WMA
Color:	Alloy Metal
Equalizer Mode:	5 User Selectable EQ Modes; Jazz, Classic, Rock, POP, Normal
Playing Time:	Can continuously play for about 350-400 minutes after fully charged.
Volume:	32 step Volume Adjustment
Info/noise Ratio:	86dB
PC Port:	USB 1.1
Capacity:	The number of MP3/WMA files depends on the memory capacity and sampling rates.
Battery:	Rechargeable Internal 3.7V Li-Ion 3.7V Rechargeable Li-Ion Battery.
Output Power:	55mw
Headphone Output Power:	5mw
Frequency Response:	20Hz – 20Khz
Current:	~ 140ma; Power Off <~ 7uA; Working 35-40mA
Battery Charge Time:	3 hours (+/-)
Operating System:	Windows 98/ME/2000/XP

Contacting Customer Service

Please READ these instructions carefully before contacting customer support. If you still believe that the Headtrip may be malfunctioning, please contact our customer service team by dialing (800) 726-2477 between the hours of 8:00 a.m. & 5:00 p.m. Pacific Standard Time. International customers can reach us at (949) 833-3222. Optionally, you can send email to support@thinkcp.com.

Product Diagram

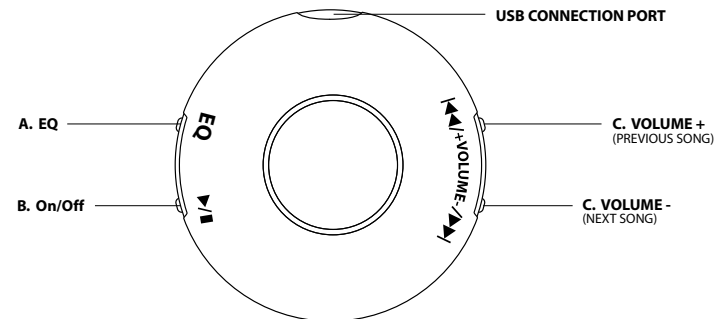

Included Accessories:

- USB Wire for MP3 Transfer & Battery Charger
- Installation CD
- User's Manual